


Chapter 3

Using the remote control

Using the remote control

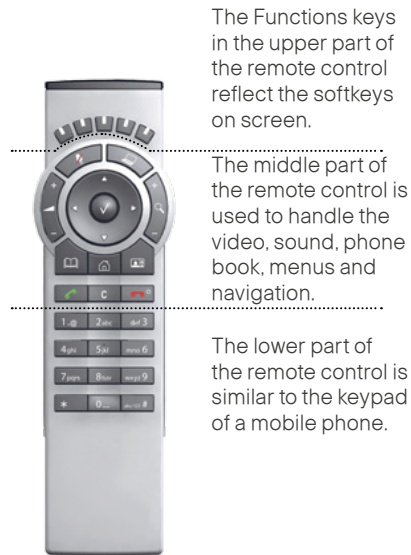

Inserting the batteries

Make sure the remote control has working batteries (4 x AAA batteries).



FUNCTION KEYS: Each Function key corresponds to a softkey on the screen and represents shortcuts and advanced functions..



ARROW UP/DOWN: Press the up ▲ and down ▼ arrow keys to navigate in the menu and to move the camera (pan, tilt) when the menu on screen is not displayed.

ARROW LEFT: Press the left ◀ arrow key to go one step back in the menu or to move to the left in a text field.

ARROW RIGHT: Press the right ▶ arrow key to expand the selected menu item or to move to the right in a text field.

OK/SELECT: Press the OK/Select key to confirm your choice or selection.

MICROPHONE: Press the Microphone key to switch between setting the microphone to on and to off.

PRESENTATION: Press the Presentation key to show or hide a presentation.

VOLUME: Press the + or – on the Volume key to adjust the codec volume.

MUTE: Press the – to mute an incoming call.

ZOOM: Press the + or – on the Zoom key to zoom the camera in and out.

PHONE BOOK: Press the Phone Book key to display the phone book.

LAYOUT: Press the Layout key to display the layout menu, then select a view in the menu.

HOME: Press the Home key to go back to the Home menu.

CALL KEY: Press the Call key to place a call, and to accept an incoming call.

Use the Call button as a shortcut to Recent Calls when the Call menu is not visible.



END CALL / STANDBY: Press the End Call key to reject an incoming call, to end an ongoing call or—when idle—to go into standby mode. When navigating in the menus the key is used to exit the menu system. Press and hold this key to have the system enter standby mode.

CLEAR: Press the Clear key to remove characters in a text field.

ALPHANUMERIC KEYPAD

The keypad behaves in a similar way to the keypad of a cellular phone.



0-9, a-z, period (.), @, space, *: Press a key repeatedly to toggle between the options displayed on each key.

abc/123 #: Press and hold the # key to toggle between lower and upper case characters and numbers (depending on context).

Waking up the system

To wake up the system just pick up the remote control or press any key. You may have to point the remote control towards the system to make sure it discovers you.

Press the **HOME** key to show the Home menu on screen.



When you pick up the remote control and touch the rubber line sensors along the sides of the remote control, the system wakes up..

IR sensor range (DIP switch setting)

The IR sensor has a short and long range. When video systems are placed close to each other, you may find it convenient to use the short range to avoid interfering with the other video systems.

Open the battery cover and remove the batteries to set the DIP switch.

- Short range (1 m / 3 ft): Move the DIP switch down.
- Long range: Move the DIP switch up.

The DIP switch

