


See Note #3

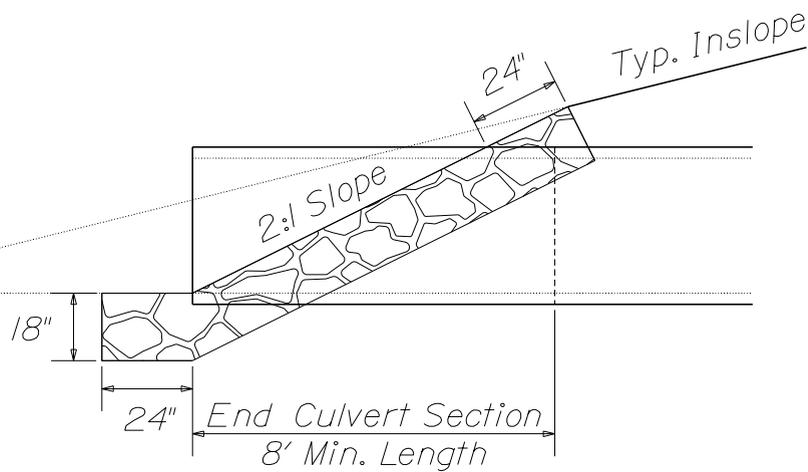

NOTES:

1. The dimensions shown are approximate and may be modified in the field by the Resident.
2. Riprap will be required on portions of the culvert end treatment that lie on a 2:1 slope. The remaining portions shall be loamed, seeded and mulched as directed.
3. Install riprap 24" around the outside diameter of the culvert pipe.

REFERENCE: Best Management Practices for Erosion and Sediment Control - Culvert Inlet / Outlet Protection.

ROADWAY CULVERT END SLOPE TREATMENT

802(05)

Revised January 1, 2017